


User Manual/Mode d'emploi
Wired Remote Control/Télécommande câblée

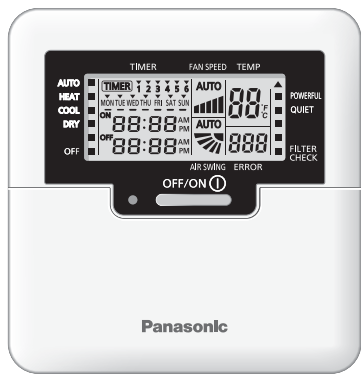

CZ-RD52CU

Disponibilité des pièces de rechange, des services de réparation et des renseignements pour l'entretien ou la réparation

Pièces de rechange

☒ Disponibles uniquement auprès d'un détaillant/entrepreneur agréé

Services de réparation

☒ Disponibles uniquement auprès d'un détaillant/entrepreneur agréé

Renseignements pour l'entretien ou la réparation

☒ Entretien par le client dans le manuel d'utilisation

Availability of replacement parts, repair services, and information for maintenance or repair

Spares parts

☒ Available through authorized dealer/contractor only

Repair services

☒ Available through authorized dealer/contractor only


Information for maintenance or repair

☒ Customer maintenance covered in Owner's Manual

User Manual
Wired Remote Control 2-5, 10

Mode d'emploi
Télécommande câblée 6-10


Wired remote control

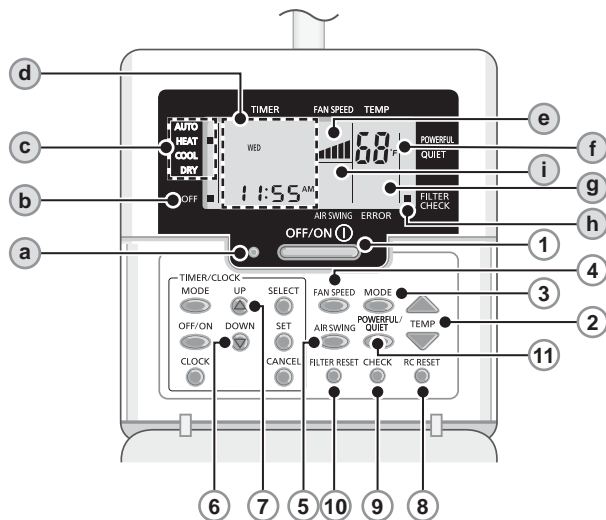

Remote Control Display

- (a) OPERATION LED
- (b) OFF INDICATOR
- (c) OPERATION MODE SELECTION INDICATOR
- (d) TIMER/CLOCK SETTING DISPLAY

Lights up if Timer operation is selected

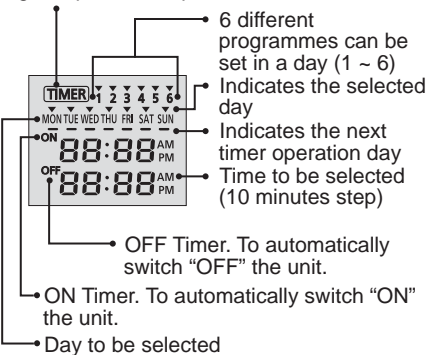

- (e) FAN SPEED DISPLAY
- (f) TEMPERATURE SETTING DISPLAY
- (g) ERROR CODE DISPLAY
- (h) FILTER CHECK INDICATOR
- (i) AIRFLOW DIRECTION SETTING DISPLAY

Remote Control Preparation

- Press and hold for approximately 5 seconds to show 12-hour (am/pm) or 24-hour time indication.
- 1. Press .
- 2. Press or to select current day.
- 3. Press to confirm.
- 4. Repeat steps 2 and 3 to set the current time.

Press the remote control's button

1 TO TURN ON OR OFF THE UNIT

- Please be aware of the OFF indication on the remote control display to prevent the unit from starting/stopping improperly.

2 TO SET TEMPERATURE

- Selection range: 60°F ~ 86°F.

3 TO SELECT OPERATION MODE

AUTO mode - For your convenience

- Unit selects operation mode during startup according to temperature setting and room temperature.

HEAT mode - To enjoy warm air

- Unit takes a while to warm up. The power indicator blinks during this operation.

COOL mode - To enjoy cool air

- Use curtains to screen off sunlight and outdoor heat to reduce power consumption during cool mode.

DRY mode - To dehumidify the environment

- Unit operates at low fan speed to give a gentle cooling operation.

4 TO SELECT FAN SPEED

 
(Remote control display)



- For AUTO, the indoor fan speed is automatically adjusted according to the operation mode.

5 TO ADJUST VERTICAL AIRFLOW DIRECTION

(Remote control display)



- Keeps the room ventilated.
- In COOL/DRY mode, if AUTO is set, the louver swing up/down automatically.
- In HEAT mode, if AUTO is set, the horizontal louver fixed at predetermined position.
- For Hide-Away models, AIR SWING buttons are not in use. Airflow direction can not be adjusted.

- 6 Press and hold for approximately 10 seconds to show temperature setting in °C or °F.

- 7 Press and hold for 5 seconds to dim or restore the unit's indicator brightness.

- 8 Press to restore the remote control's default setting.

9 RETRIEVE ERROR CODE


- During operation, the unit stops and both **a** and **b** is OFF indicates abnormality occurs.

1. Ensure **a** is OFF, press **CHECK** for 5 seconds.
2. Press **▲** or **▼**. If error code and abnormality can be identified, **a** will be ON continuously, then write down the error code.
3. Press **CHECK** for 5 seconds to quit checking.
4. Turn the unit off and reveal the error code to authorized dealer.

Note: Press **CHECK** for 10 seconds to enter AC reset switch (Not used in normal operation).

10 AIR FILTER MAINTENANCE

Cleaning is needed when "FILTER CHECK" indicator is ON.

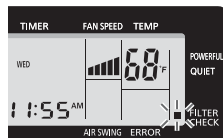

- It is recommended to clean the air filter every 6 weeks.
- After the air filter is cleaned, press **FILTER RESET** to reset.
- Do not operate without an air filter.
- Wash/rinse the filters gently with water to avoid damage to the filter surface.
- Do not dry the part with a hair dryer or a stove.
- Replace any damaged filters.

11 TO SWITCH BETWEEN POWERFUL & QUIET



POWERFUL: To reach temperature quickly

- This operation stops automatically after 20 minutes.


QUIET: To enjoy quiet operation

- This operation reduces airflow noise.

To set the timer

DAILY TIMER SETTING

- To turn ON or OFF the unit at a preset time.

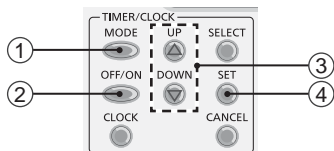



- ① • Press once to change the display from Clock to Timer or vice-versa.
- Press for more than 4 seconds to change the display from Daily Timer to Weekly Timer or vice-versa.

- ② Select ON or OFF timer

- ③ Set the time

- ④ Confirm

- To cancel ON or OFF timer, press .
- Timer operation is based on the clock set in the remote control and repeats daily once set.
- The timer closest to the current time will be activated first.
- If timer is cancelled manually or due to power failure, you can restore the previous setting by pressing .

WEEKLY TIMER SETTING


- Daily timer and weekly timer could not be set at the same time.
- Promotes energy saving by allowing you to set up to 6 programmes in any given day.

- Press  for 4 seconds to change display to weekly timer.



- Press   or  to select your desired day.


- Press  to confirm your selection.



- "1" will be blinking, press  to set programme 1.

- Press  to select ON or OFF timer.

- Press   or  to select your desired time.


If you want to set the timer together with your

desired temperature, press  to select the

- Press  to confirm programme 1. The selected day will be highlighted with .

- After 2 seconds, the display will move to the next programme. Repeat steps 4 to 7 to set programmes 2 to 6.

- Same timer programme cannot be set in the same day.








- During timer setup, if no button is pressed within 30 seconds, or if the  button is pressed, the setting at that moment is confirmed and timer setup is ended.

OPERATION DETAILS





The timer setting will be shown at the wired remote control only but not at the indoor unit's TIMER indicator.

Check Current Timer Programme

Perform the step below to check the timer programme for a particular day.









1. Press **TIMER**  to enter timer mode.
2. Press **SELECT**  to enter day setting.
3. Press **TIMER**  or **DOWN**  until your desired day is shown, press **SELECT**  to confirm your selection.
4. Press **TIMER**  or **DOWN**  to check the set programmes.

Modify Current Timer Programme or Add New Timer Programme



1. Press **TIMER**  to enter timer mode.
2. Press **SELECT**  to enter day setting.
3. Press **TIMER**  or **DOWN**  until your desired day is shown.
4. Perform steps 4 to 7 of "WEEKLY TIMER SETTING" to modify existing timer programme, or add any timer programme.

Cancel Current Timer Programme

Perform the step below to cancel the timer programme for a particular day.

1. Press **SELECT**  to enter day.
2. Press **TIMER**  or **DOWN**  until your desired day is shown.
3. Press **SELECT**  to enter programme setting.
4. Press **TIMER**  or **DOWN**  until your desired programme is shown.
Press **CANCEL**  to cancel the programme and  will disappear.

Disable & Enable Weekly Timer

- To disable weekly timer setting, press **TIMER** , then press **CANCEL** .
- To enable previous weekly timer setting, press **TIMER** , then press **SET** .

NOTE

- POWERFUL, QUIET operation setting could be operated according to wireless remote control.
- When wired remote control is in operation, the timer setting from wireless remote control will be cancelled.

Panasonic Corporation

Website: <http://panasonic.net/>

Panasonic Canada Inc.

Website/Site Web: <http://www.panasonic.com>

For support: <http://www.panasonic.ca/english/support>

Pour le soutien: <http://panasonic.ca/french/support>

© Panasonic Corporation 2014

Printed in China

Imprimé en Chine For inquiries (U.S.A.), please call 1-800-851-1235 (Pour les É.-U.)

F569894

SA1214-0