


Installation and Operating Instructions

English

Energy Recovery Ventilator

Model No. **FV-15ESC1** **FV-12ESC1**
FV-14ES1 **FV-11ES1**

Representative models:

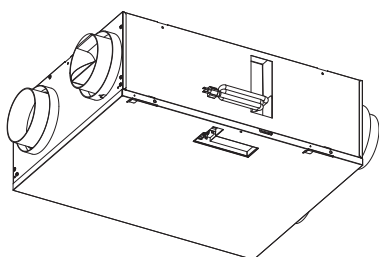

FV-15ESC1
FV-14ES1

FV-12ESC1
FV-11ES1

CONTENTS

GENERAL SAFETY INFORMATION	2 - 3
DESCRIPTION	4
WIRING DIAGRAM	5
SUPPLIED ACCESSORIES	5
WIRING METHOD	6 - 8
INSTALLATION I (WALL MOUNT)	9
INSTALLATION II (CEILING MOUNT)	10
INSTALLATION III (FLOOR MOUNT)	11
MIRROR CONFIGURATION (OPTIONAL)	12-13
DUCT INSTALLATION	14 - 19
OPERATION	20 - 21
MAINTENANCE	22 - 23
TROUBLESHOOTING	24 - 25
Wi-Fi CONTROL MODULE	25
SPECIFICATIONS	26
WARRANTY	27
PRODUCT SERVICE	BACK COVER



This manual is also
available online.

READ AND SAVE THESE INSTRUCTIONS

Thank you for purchasing this Panasonic product.

Please read these instructions carefully before attempting to install, operate or service the product. Please carefully read the "GENERAL SAFETY INFORMATION" (P.2 - 3) of this manual before use. Failure to comply with instructions could result in personal injury or property damage. Please explain to users how to operate and maintain the product after installation, and this manual should be presented to and retained by the end users for future reference.



15ESC1450



GENERAL SAFETY INFORMATION

For Your Safety





To reduce the risk of injury, loss of life, electric shock, fire, malfunction, and damage to equipment or property, always observe the following safety precautions.

Explanation of symbol word panels









The following symbol word panels are used to classify and describe the level of hazard, injury, and property damage caused when the denotation is disregarded and improper use is performed.

 WARNING	Denotes a potential hazard that could result in death or serious injury.
 CAUTION	Denotes a hazard that could result in minor injury.
NOTICE	Denotes a hazard that could result in property damage.

The following symbols are used to classify and describe the type of instructions to be observed.

	This symbol is used to alert users to a specific operating procedure that must not be performed.
	This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely.
	This symbol is used to alert users not to disassemble the equipment.
	This symbol is used to alert users to make sure of grounding when using the equipment with the grounding terminal.




WARNING

-  When cutting or drilling into wall or ceiling, be careful not to damage electrical wiring and other hidden utilities.
-  Solid state controls may cause harmonic distortion which can cause motor humming noise. To reduce the risk of fire or electric shock, do not use this unit with any non-approved control device.
-  Never install the unit in a high humidity space, such as a bathroom, kitchen or laundry room.
-  Do not install with a method which is not approved in the instructions.
-  Do not disassemble the unit. It may cause fire or electric shock.
-  Use this unit only in the manner intended by Panasonic. If you have any questions, contact Customer Service.
-  Installation work and electrical wiring must be performed by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
-  Ceiling joist and wall stud must be able to withstand a static load more than five times the weight of the product.

GENERAL SAFETY INFORMATION

- ! The special-purpose or dedicated parts, such as mounting fixtures, must be used if such parts are provided.
- ! Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent backdrafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating Refrigeration and Air Conditioning Engineers (ASHRAE) and the local code authorities.

CAUTION

-  For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.
-  Do not kink the power cord.
-  Do not install the unit in an area where the air stream temperature may exceed 104 °F (40 °C).
- ! Install the unit in the area where air temperature is above 50 °F (10 °C) to avoid condensation in unit.
- ! The unit must be installed in a conditioned space such as a mechanical room or basement.
- ! The outdoor air (OA) duct and exhaust air (EA) duct must be connected directly to the outside. Refer to local codes for termination locations.
- ! Make certain that the electric service supply voltage is AC 120 V, 60 Hz.
- ! Follow all local electrical and safety codes, as well as the National Electrical Code (NEC) and the Occupational Safety and Health Act (OSHA).
- ! Always disconnect the power source before working on or near the fan, motor, fixture or wiring cover.
- ! Protect the power cord from sharp edges, oil, grease, hot surfaces, chemicals or other objects.
- ! This product are intended for residential use only.
- ! When the product is no longer in use, it must be removed from its location to prevent it from falling.
- ! Disconnect power by switching off standby switch first, then main switch and unplug before working on unit.

NOTICE

-  Do not install the unit where ducts are configured as shown below.



Excessive bending



Successive bending




Squeezed duct



Bend close to duct adapter

DESCRIPTION

Energy Recovery Introduction: ERV can transfer both heat and humidity and recover energy from that humidity. ERV can exchange energy between "stale" EA and "fresh" OA, by transferring heat and moisture into the incoming cold air, and pre-cooling and reducing the humidity of the incoming hot air. This helps maintain a fresh environment even when the heating or cooling system is not operating.

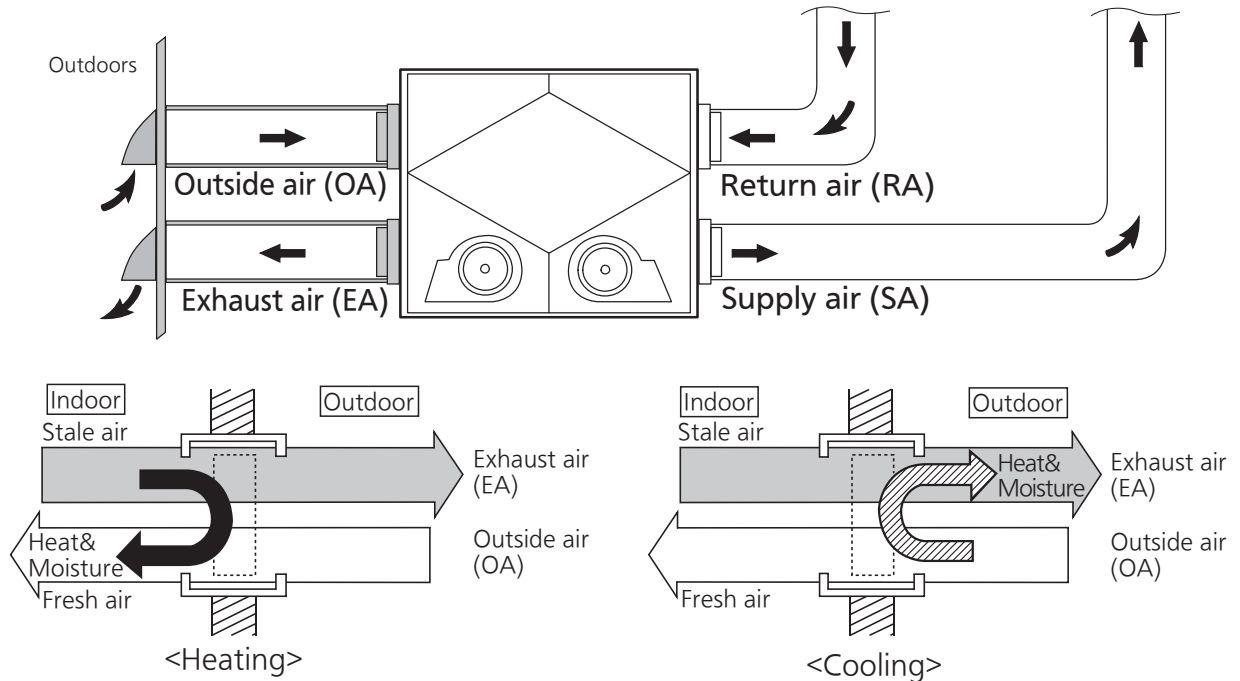

<Frost prevention operation>

The ERV defrosts automatically according to outdoor temperature. On FV-15ESC1 and FV-12ESC1 models, frost prevention operation can be selected from recirculation and exhaust. (see setting configuration)

For FV-15ESC1 and FV-12ESC1

Outdoor temp.	Mode	Operation time
>23°F (-5°C)	Vent	Continued
	Defrost	-
23°F (-5°C)-5°F (-15°C)	Vent	20 min
	Defrost	8 min
5°F (-15°C)-17°F (-27°C)	Vent	15 min
	Defrost	8 min
17°F (-27°C)-22°F (-30°C)	Vent	7 min
	Defrost	10 min
≤-22°F (-30°C)	Vent	Stop
	Defrost	*

*Operates for 4 min per hour to check outdoor temperature.


For FV-14ES1 and FV-11ES1

Outdoor temp.	Mode	Operation time
>23°F (-5°C)	Vent	Continued
	Defrost	-
23°F (-5°C)-14°F (-10°C)	Vent	20 min
	Defrost	10 min
≤14°F (-10°C)	Vent	Stop
	Defrost	*





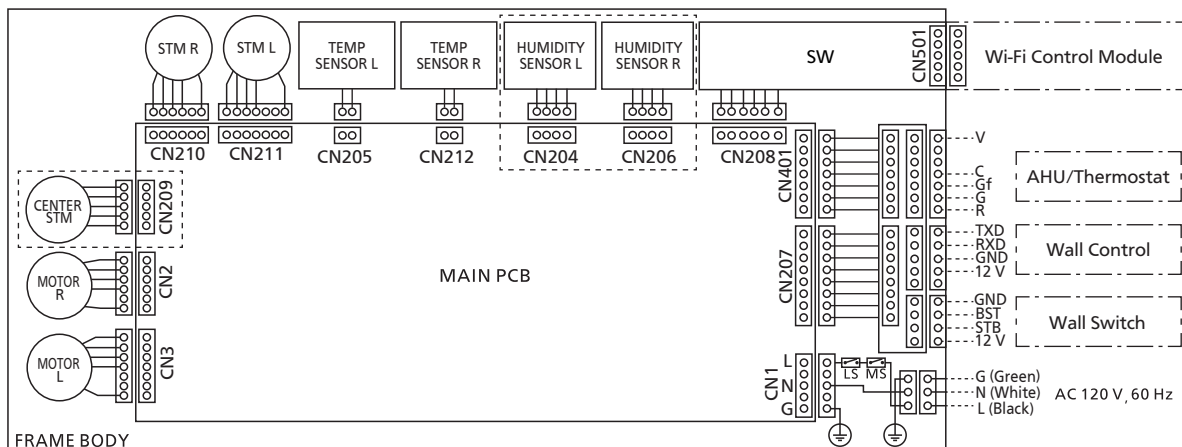


- (Note) (1)For FV-15ESC1 and FV-14ES1, air volume is limited to maximum 120CFM when outdoor temperature is under 23°F(-5°C).
 (2)Air volume difference between SA and EA is limited to 20CFM when outdoor temperature is under 23°F(-5°C).

WIRING DIAGRAM

is for FV-15ESC1 and FV-12ESC1 only



SUPPLIED ACCESSORIES

Part name	Appearance	Quantity
Cover for hardwired connection		1
Hardwired connector		1
L plate		4
Interface cover		1
Screw (M4X8)		8
Long screw (ST4.2X30)		4
Installation and operating instructions & Warranty sheet		1

WIRING METHOD


⚠ CAUTION

- ⚠ Make sure that the all wires are connected to the right terminal.
Miswiring may cause a permanent damage to the control circuit.
- ⚠ Do not connect more than one Standby switch.
Do not connect more than two Boost switches.

Note

- (1)The terminal of standby connection has been connected by jumper wire as factory default. If connecting with Standby switch, please remove the jumper wire.
- (2)Insert wires into the corresponding terminals deeply.
Make sure the screw of the terminal securely fastens the copper wire and the copper wire is not exposed.
- (3)Before closing the door, make sure all wires are put through the wire holders.
- (4)Recommended wire gauge for control signal is 14AWG-24AWG


<Standby/Boost connection>

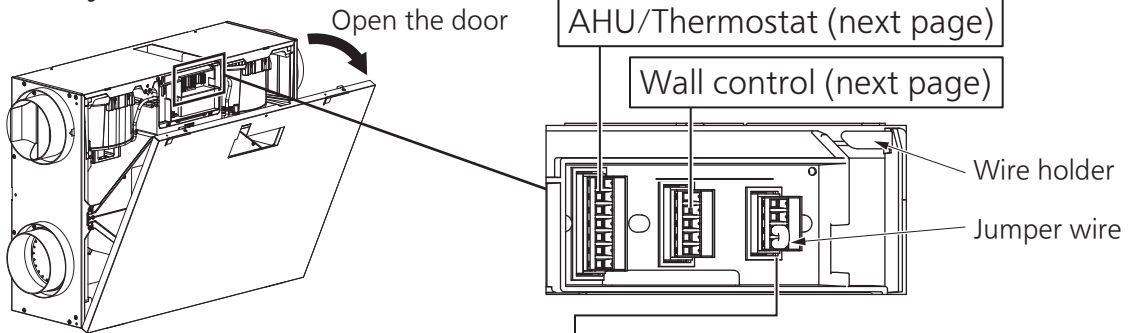

Method I

Using dry contact for the BOOST


STANDBY (Any dry contact)

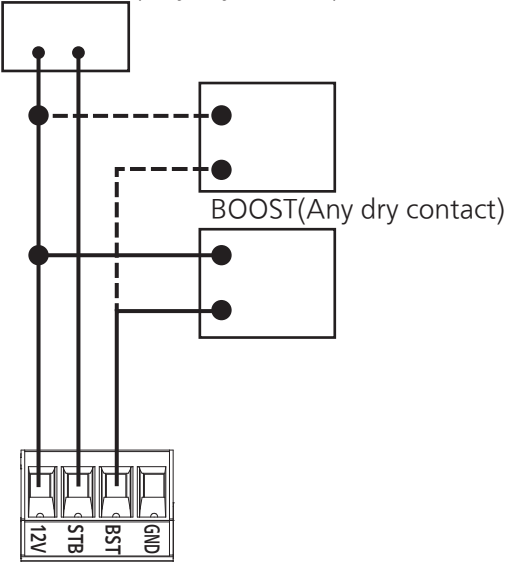

Method II

Using low voltage switch(SKU:FV-SWLV1060) for the BOOST

STANDBY (Any dry contact)

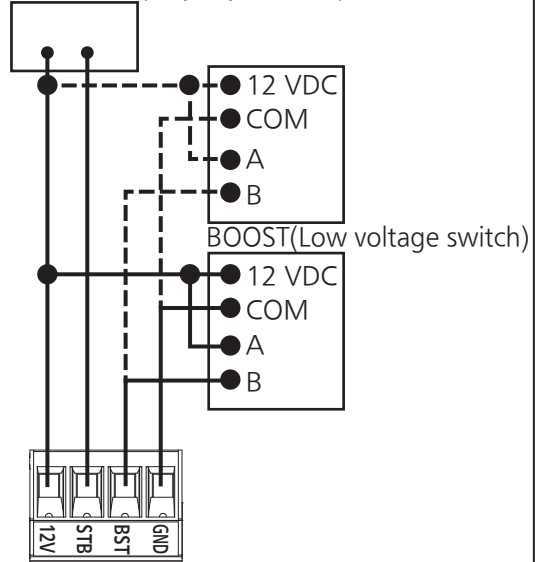



WIRING METHOD

<AHU/Thermostat connection>

These connections allows the unit to synchronize with AHU and thermostat.


Note

These connections are required for installation configuration dC2 and dC4. Refer to duct installation (P.15 and P.17) for more details.

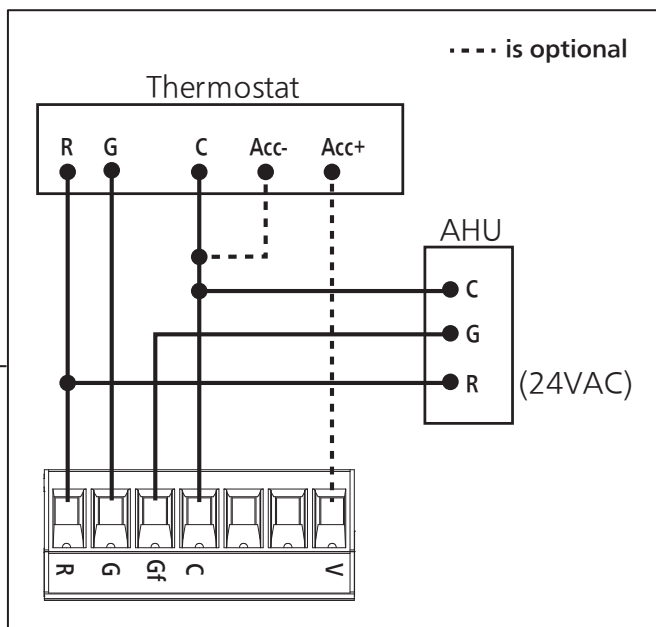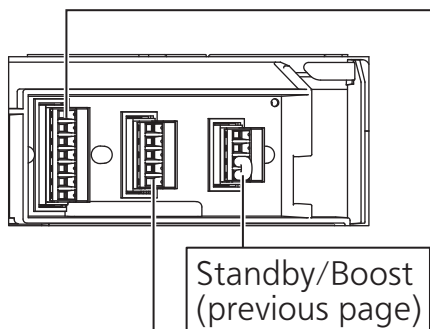

<Wall control connection>

The wall control is optional (SKU:FV-SCVE2). Refer to the instruction of FV-SCVE2 for installation.

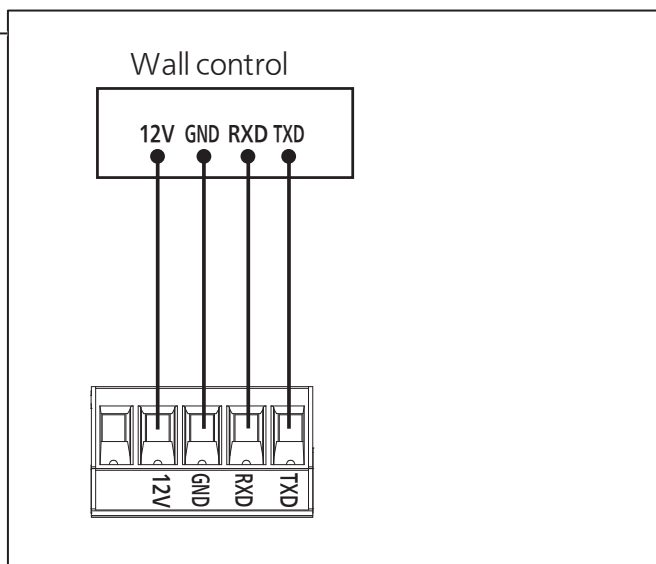


WIRING METHOD

⚠ WARNING


⚠ Installation work and electrical wiring must be performed by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction, use UL approved wire nuts. Read all safety instructions of GENERAL SAFETY INFORMATION (P.2-3)

<Hardwired connection (optional)>


- 1** Remove 2 screws and open PCB cover.

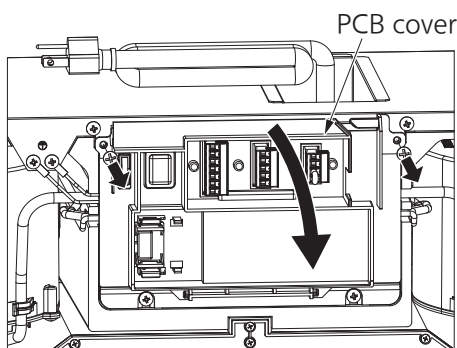


- 2** Remove junction cover.

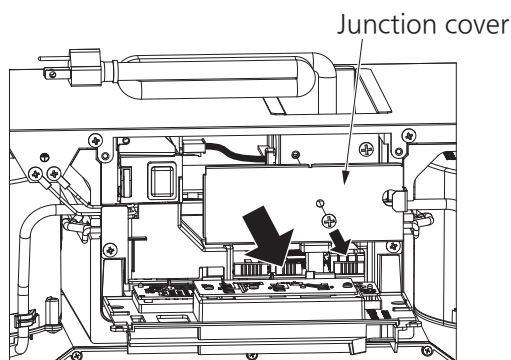

- 3** Remove the power cord and wire cover.

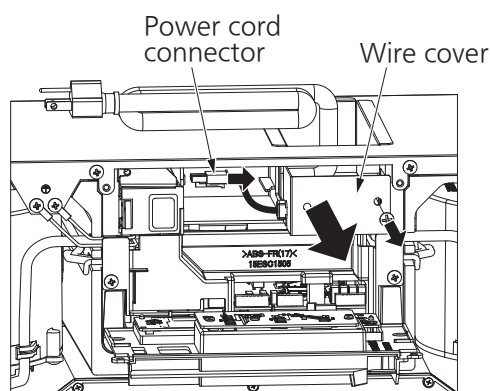


- 4** Install wires.

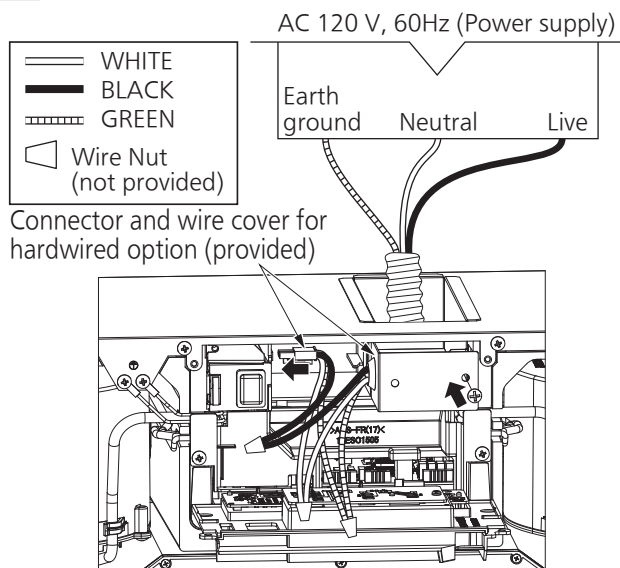

- 5** Reinstall junction cover and PCB cover.


INSTALLATION I (WALL MOUNT)

- 1** Mount L plates.

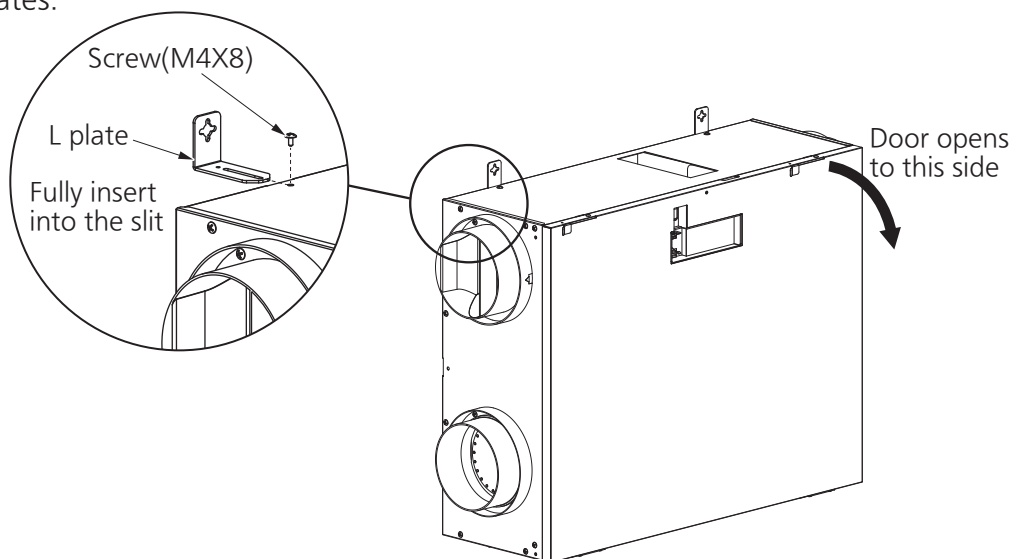


- 2** Mount ERV to studs with the long screws (ST4.2X30).

<For FV-15ESC1 and FV-12ESC1>

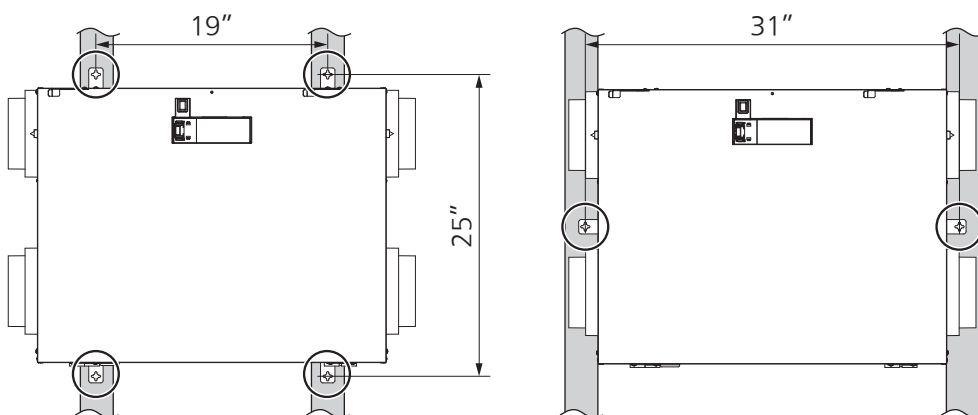


<For FV-14ES1 and FV-11ES1>

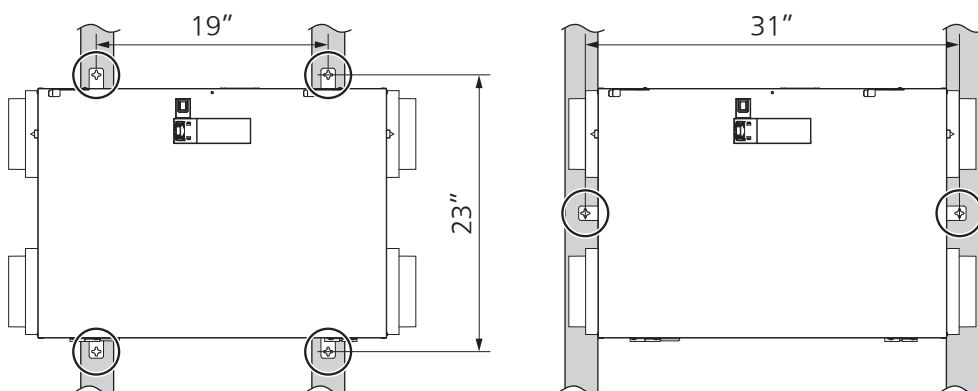


INSTALLATION II (CEILING MOUNT)

1 Mount L plates.

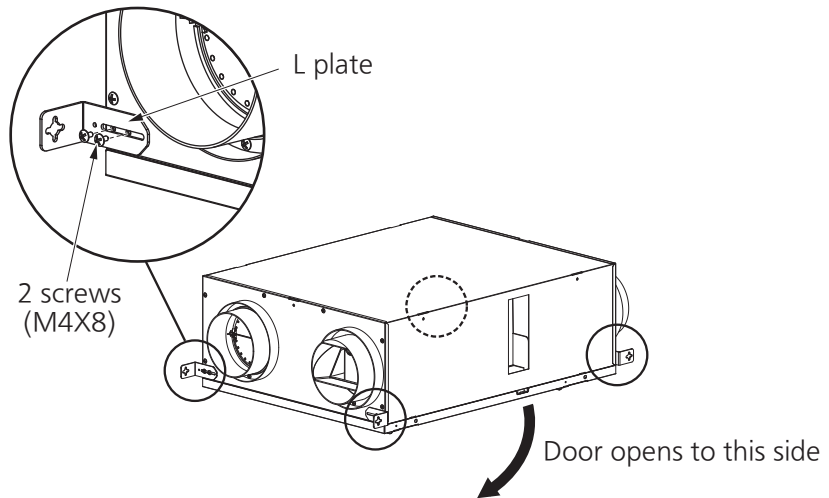



2

Hang ERV from joists using chains.

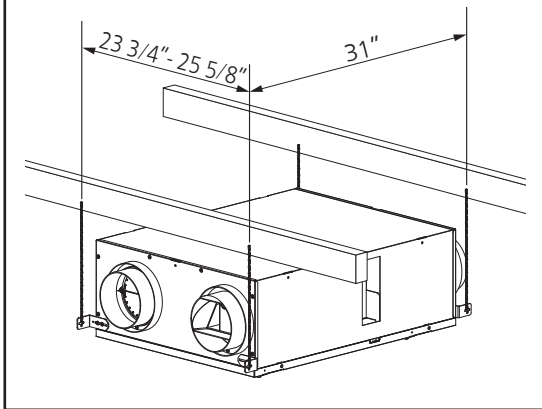

OR

Mount ERV to joists with the long screws (ST4.2X30).
(For FV-14ES1 and FV-11ES1 only)

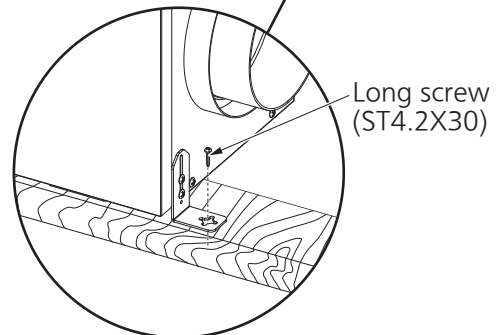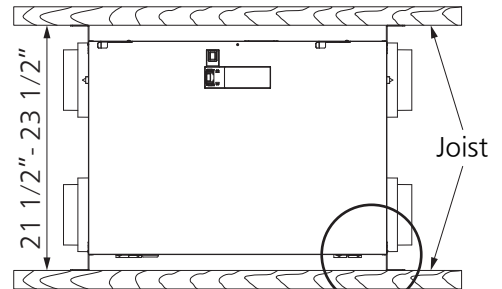

Note




- (1) The chains are not provided. Use only chains with a working load limit of 66 lbs. (30 kg) or above.
- (2) Make sure ERV is level after installation.

INSTALLATION III (FLOOR MOUNT)

1 Mount L plates.

2 Mount ERV to floor with the long screws (ST4.2X30).


3 Rotate the RA shutter.

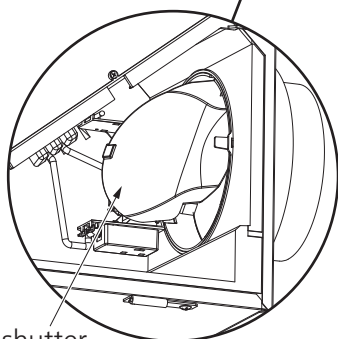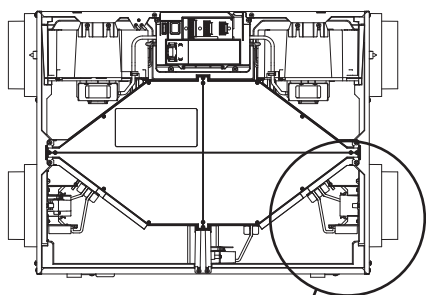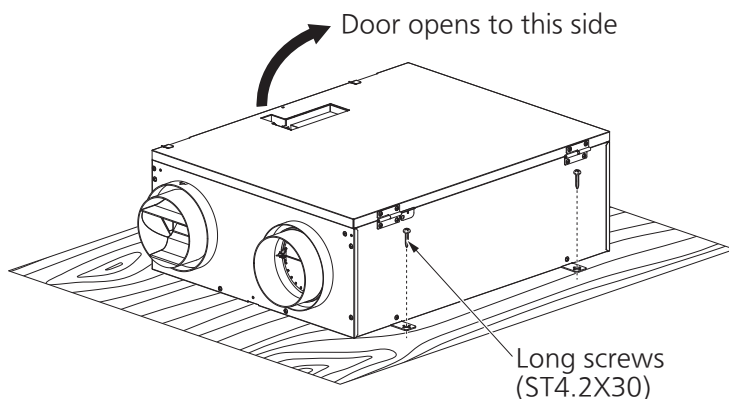

(1) RA shutter
(opened by gravity)

Label appears


Ceiling/Wall
Plafond/Mur

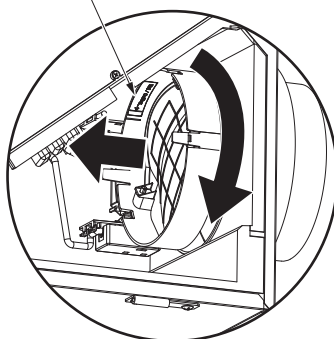

(2) Pull out and rotate 180°


Label appears

Floor
Sol

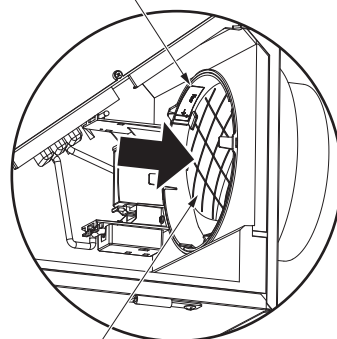

(3) Put it back
(Make sure it is closed by gravity)

4 Install the interface cover.

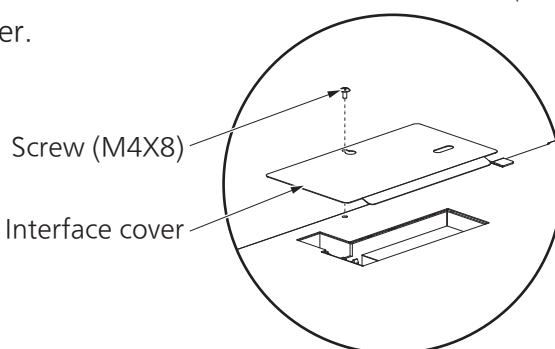

NOTICE

It is recommended to install;


- in a conditioned space away from living areas (dining room, living room, bedroom).
- by suspending with chains to minimize transmission of vibration.
- using vibration isolation pads for wall and floor installation.
- ducts as straight as possible and minimize the number of elbows.

MIRROR CONFIGURATION (OPTIONAL)


The airflow of the ERV can be changed from the factory default configuration to mirrored configuration.

Follow the instructions and switch the positions of OA damper and RA shutter (see P.13). After switching the position of OA damper, confirm the following:


1. Selected configuration is indicated on the display (see P.20-21) during the initial startup.
2. At the same time, the unit will operate in supply-only mode. Confirm the supply air duct is installed in the correct place.
3. If your installation is correct, press and hold the mode button to start operation.
4. Mark the label on the door.

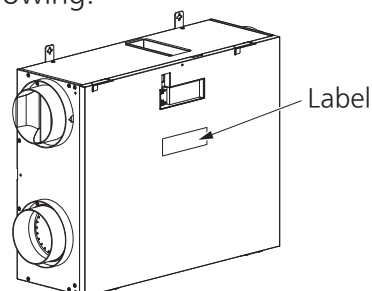

<Default configuration>

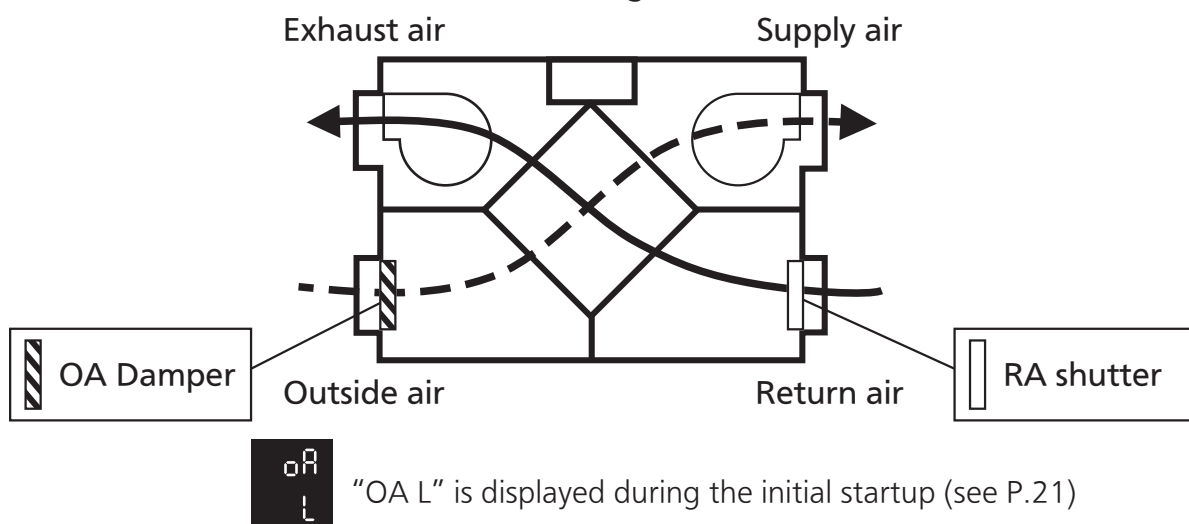


<Mirror configuration>

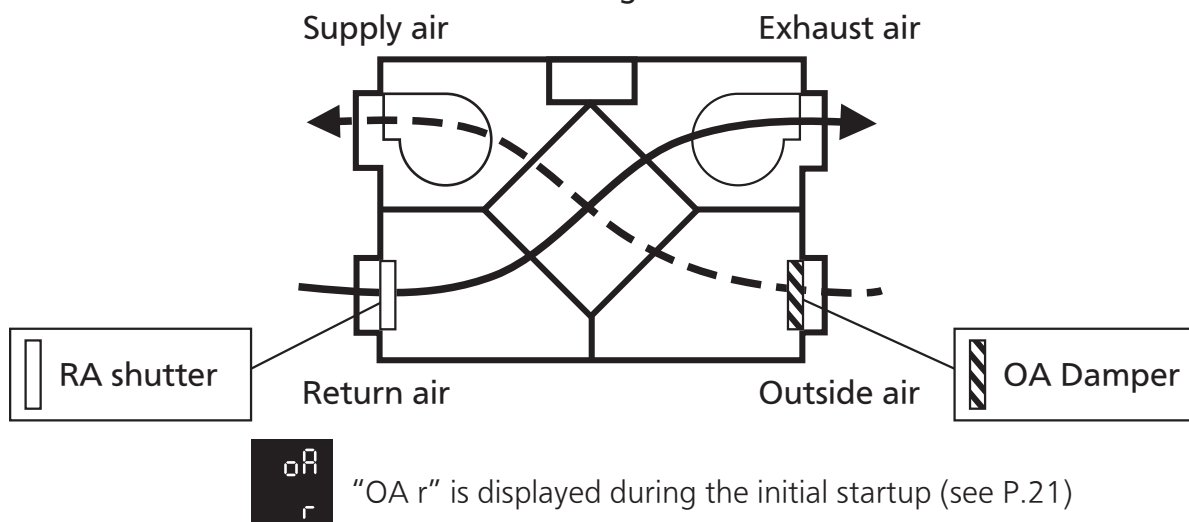

MIRROR CONFIGURATION (OPTIONAL)


- 1 Remove OA damper by pressing the hooks on the sides.

- 2 Remove connector cover by pressing the hooks on the sides and RA shutter by removing the hooks on the top and the bottom.

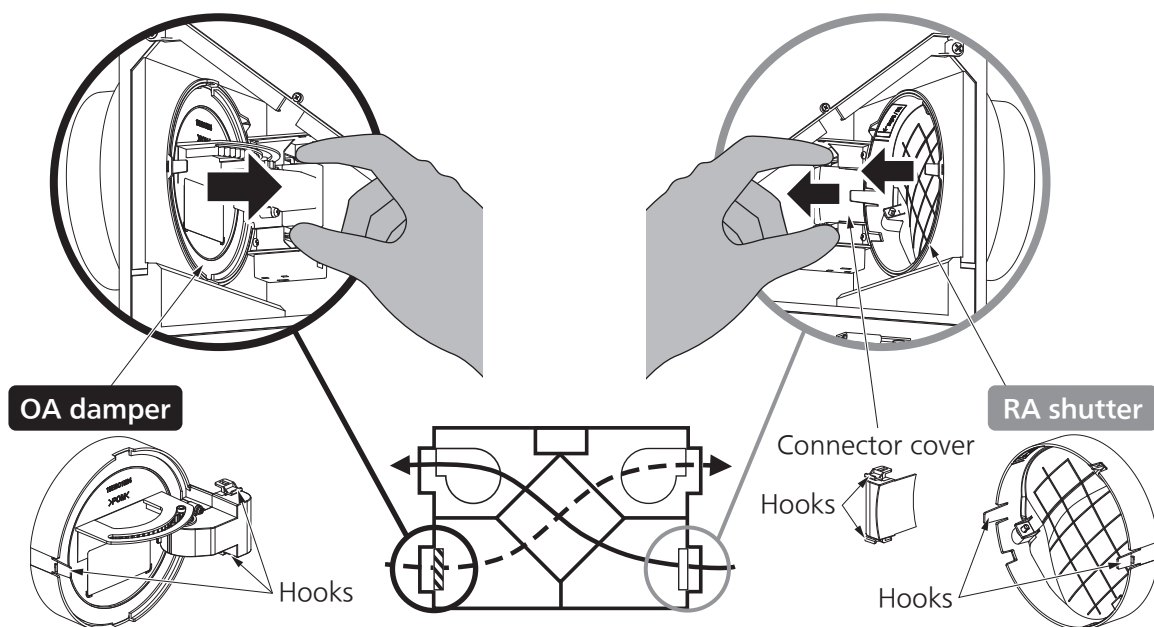

- 3 Attach RA shutter and connector cover to the left.

- 4 Attach OA damper to the right.

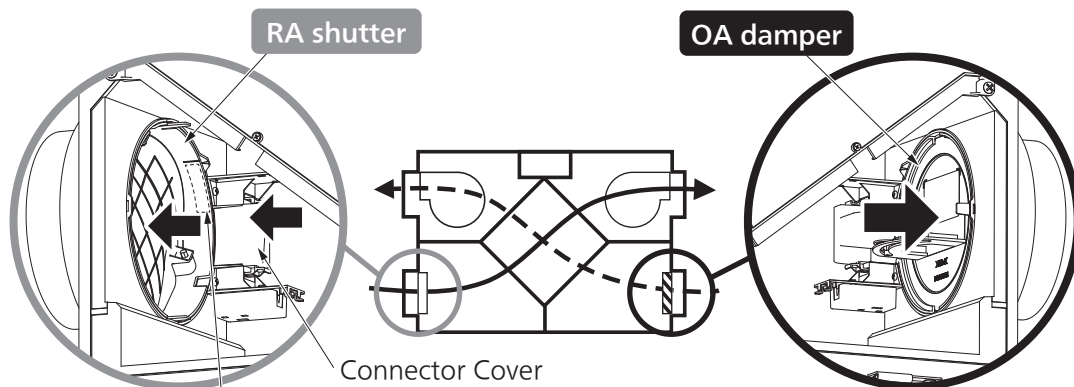

Ceiling/Wall
Plafond/Mur

"Ceiling/Wall" should appear for ceiling and wall installation.

Floor
Sol

"Floor" should appear for floor installation (also refer to P.11).



NOTICE

Be careful with the direction of RA shutter.
Make sure it is closed by gravity with the installed position of ERV.

DUCT INSTALLATION

Method I - Fully dedicated ducted installation(dC1)

This method draws return air from specific points in the house where the poorest indoor air quality exists (bathroom and kitchen) and supplies outside air to specific locations (all bedrooms and living areas) of the house. This system is not connected to an AHU.

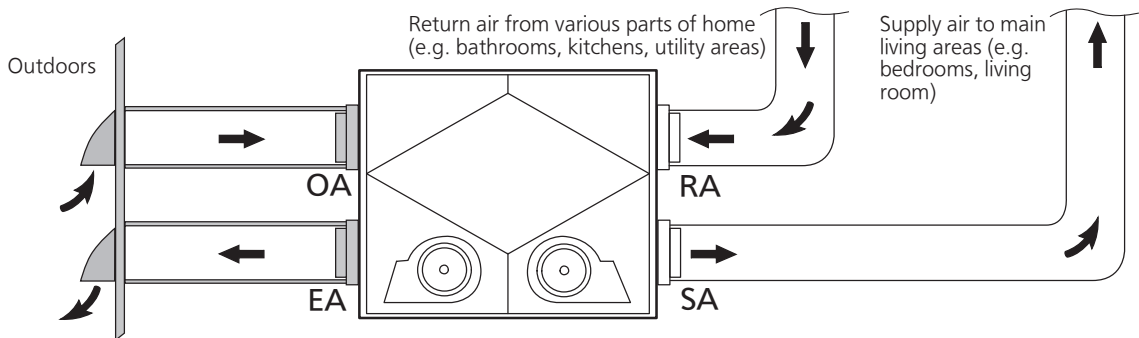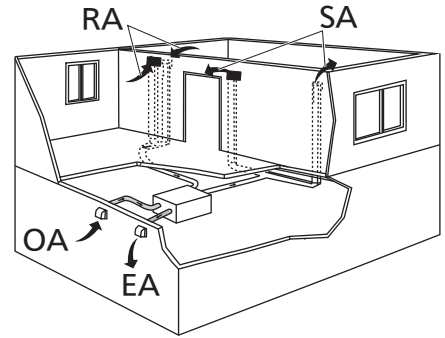

*This simplified figure is for reference only

Note


- (1) Check local codes and authority having jurisdiction for acceptance.
- (2) Must have 2-3 ft straight run on all duct attachments points before any elbows.
- (3) The distance between two outdoor hoods should be compliant with local codes.
- (4) The dC1 option must be selected in configuration setting for this installation (see P.20-21).

DUCT INSTALLATION

Method II - Partially dedicated ducted installation(dC2)

This method draws return air from specific points in the house where the poorest indoor air quality exists (bathroom and kitchen) and supplies an equal amount of outside air into the return air duct of the AHU.

The AHU should be running when the ERV is operating to evenly distribute the outside air throughout the house.

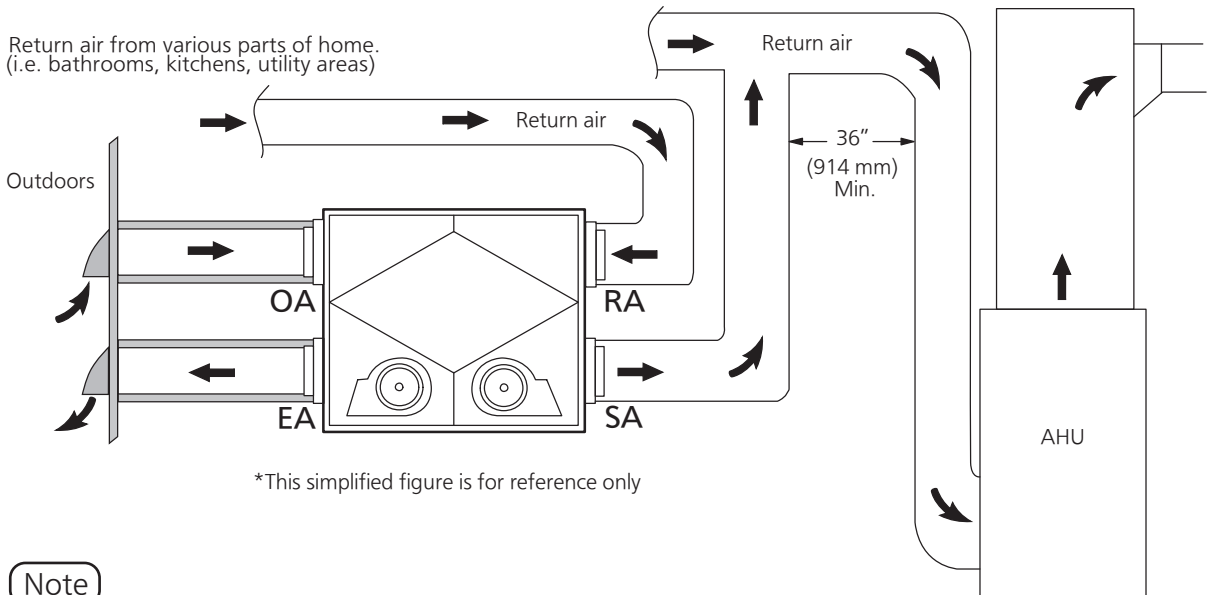


Note

- (1) Check local codes and authority having jurisdiction for acceptance.
- (2) Must have 2-3 ft straight run on all duct attachments points before any elbows.
- (3) The distance between two outdoor hoods should be compliant with local codes.
- (4) The dC2 option must be selected in configuration setting for this installation (see P.20-21).
- (5) It is mandatory that the AHU is synchronized by connecting the signal wires (see P.6-7).
- (6) The ERV is normally balanced on high speed with the AHU blower on.

DUCT INSTALLATION

Method III- Partially dedicated ducted installation(dC3)

This method draws return air from specific points in the house where the poorest indoor air quality exists (bathroom and kitchen) and supplies an equal amount of outside air into the supply air duct of the AHU.

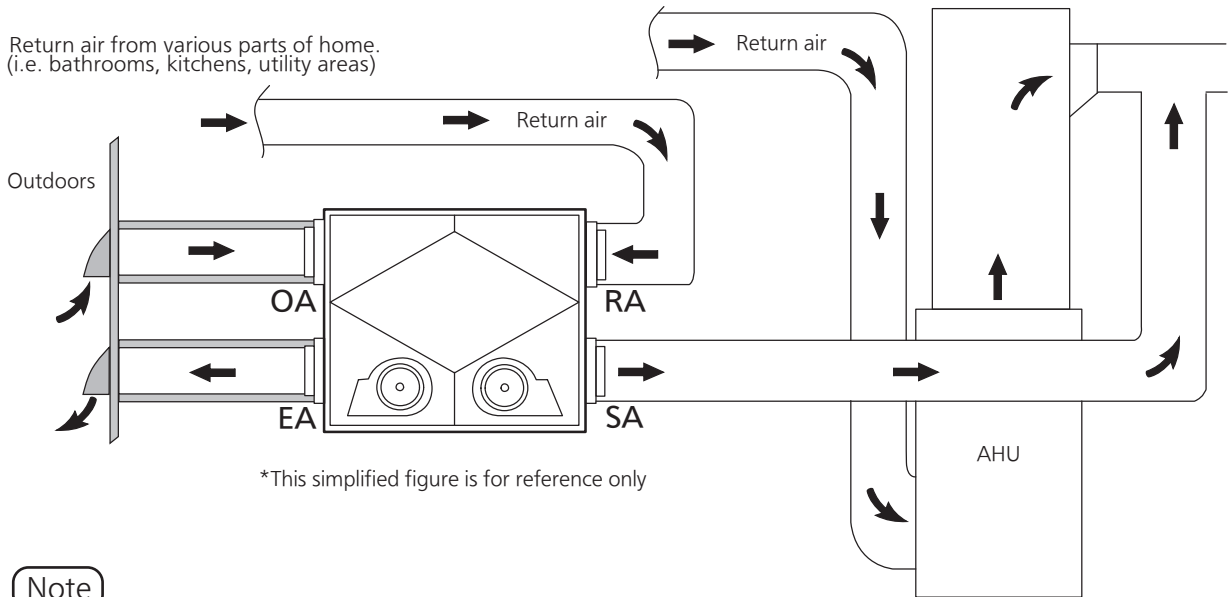

Note

- (1) Check local codes and authority having jurisdiction for acceptance.
- (2) Must have 2-3 ft straight run on all duct attachments points before any elbows.
- (3) The distance between two outdoor hoods should be compliant with local codes.
- (4) The dC3 option must be selected in configuration setting for this installation (see P.20-21).
- (5) It is recommended that AHU is synchronized by connecting the signal wires (see P.6-7).
- (6) The ERV is normally balanced on high speed with the AHU blower on.


⚠ CAUTION

To avoid errors caused by high pressures, this configuration is not recommended to be used with a high velocity HVAC/AHU system.

DUCT INSTALLATION

Method IV- Simplified ducted installation (Return method)(dC4)

This method draws return air from the return air duct of the AHU and supplies an equal amount of outside air farther downstream into the return duct.

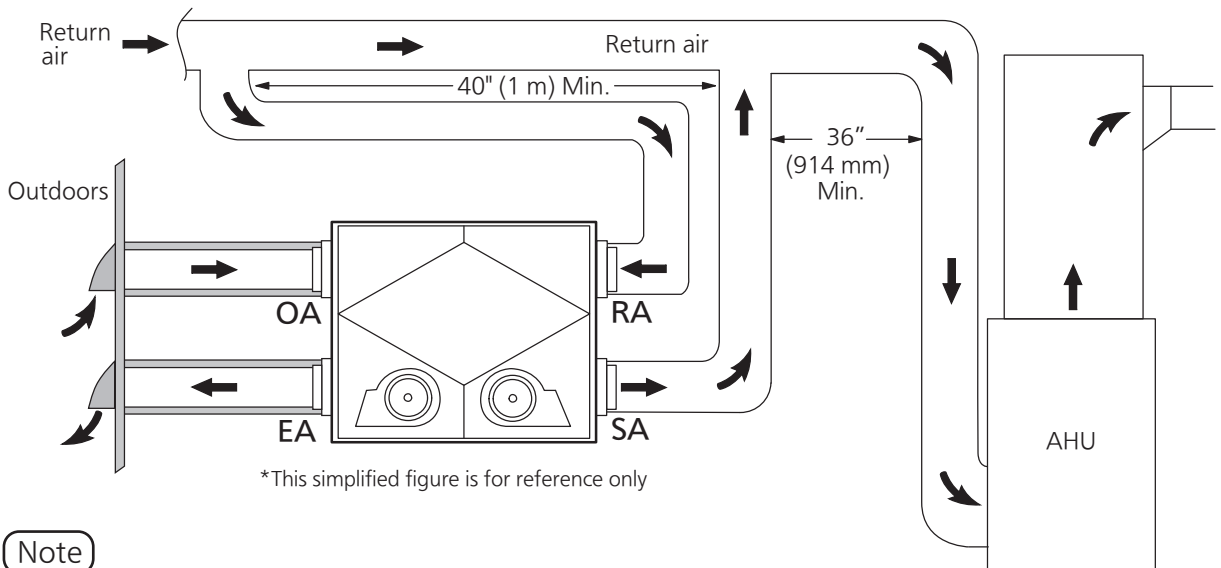


Note

- (1) Check local codes and authority having jurisdiction for acceptance.
- (2) Must have 2-3 ft straight run on all duct attachments points before any elbows.
- (3) The distance between two outdoor hoods should be compliant with local codes.
- (4) The dC4 option must be selected in configuration setting for this installation (see P.20-21).
- (5) It is mandatory that AHU is synchronized by connecting the signal wires (see P.6-7).
- (6) The ERV is normally balanced on high speed with the AHU blower on.
- (7) This installation does not allow recirculation mode to operate.

DUCT INSTALLATION

Method V - Alternate of Method IV (dC5)

This method draws return air from the return air duct of the air furnace and supplies an equal amount of outside air into the supply air duct of the AHU.

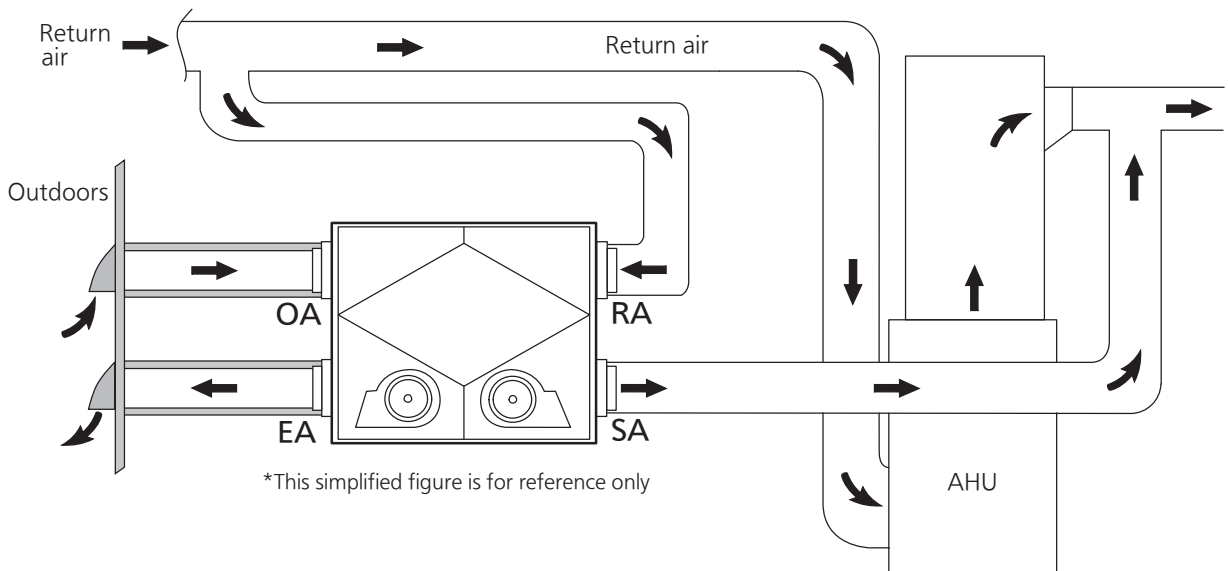

Note


- (1) Check local codes and authority having jurisdiction for acceptance.
- (2) Must have 2-3 ft straight run on all duct attachments points before any elbows.
- (3) The distance between two outdoor hoods should be compliant with local codes.
- (4) The dC5 option must be selected in configuration setting for this installation (see P.20-21).
- (5) It is recommended that AHU is synchronized by connecting the signal wires (see P.6-7).
- (6) The ERV is normally balanced on high speed with the AHU blower on.
- (7) This installation does not allow recirculation mode to operate.

CAUTION



To avoid errors caused by high pressures, this configuration is not recommended to be used with a high velocity HVAC/AHU system.

DUCT INSTALLATION


1 Install insulated ducts to the OA and EA adapter.

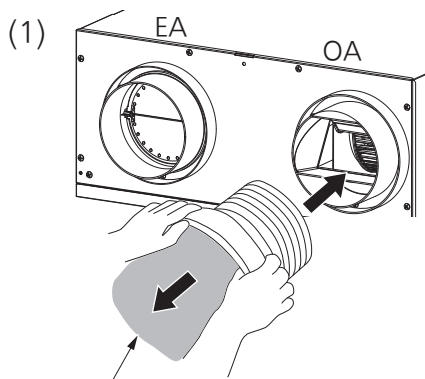


Pull back the insulation

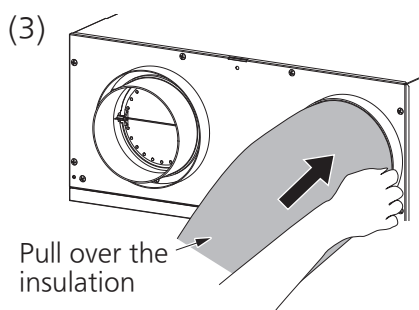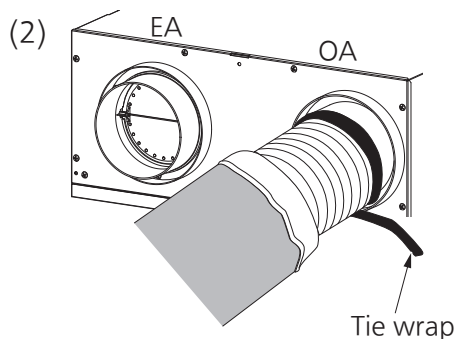

Pull over the insulation

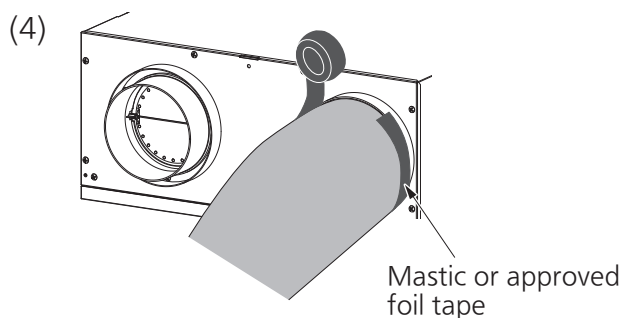

2 Attach duct (rigid galvanized duct, etc.) to the SA and RA adapter.

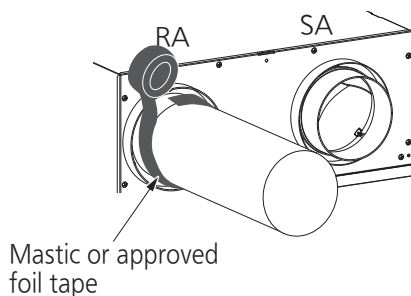

To avoid transmission of vibrations, it is recommended to use a 6-inch section of flexible duct to connect rigid ducts.

3 Install outdoor hood and connect with insulated ducts.

If separate hoods are used, locate them at least 10 ft (3 m) apart.
Seal hoods with caulk or other similar material.


CAUTION



The intake side duct must be connected to the outside and at least 6 ft (1.8 m) away from the exhaust of appliances such as furnace, dryer, fuel burning appliances, etc.


(Note)

Please refer to the local codes for detail.

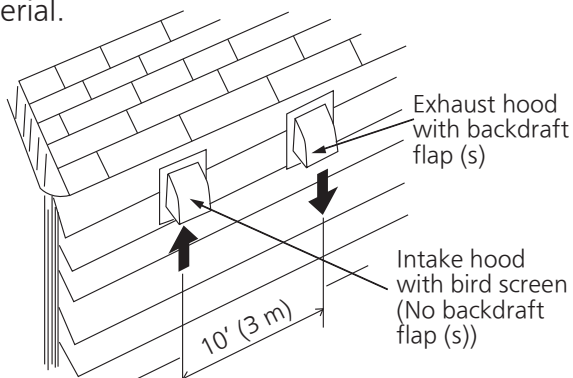

OPERATION

<Control panel>

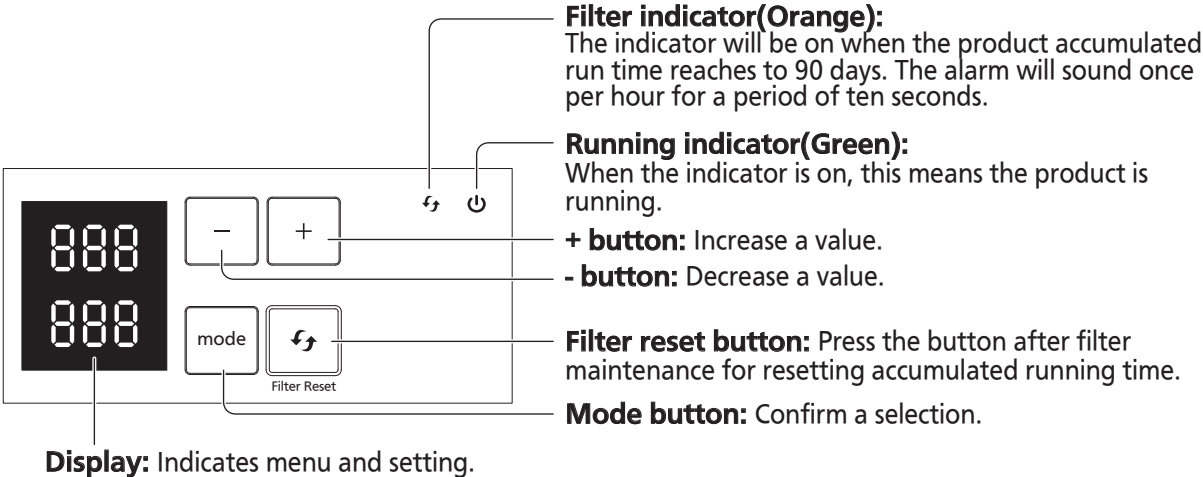


Main switch: Power on or off for ERV. Push the main switch completely to the on/off position when turning on/off.

Note The unit will consume some electricity unless you turn off the main switch. It is recommended to put the unit in standby mode by using a switch or the wall control before turning off the main power switch. This will allow the exterior dampers to close and prevent unwanted passive air flow.

<Display navigation> *Available after initial startup

Press the mode button to enter the menu selection.
Press +/- button to cycle through settings and press and hold mode button to enter each setting.

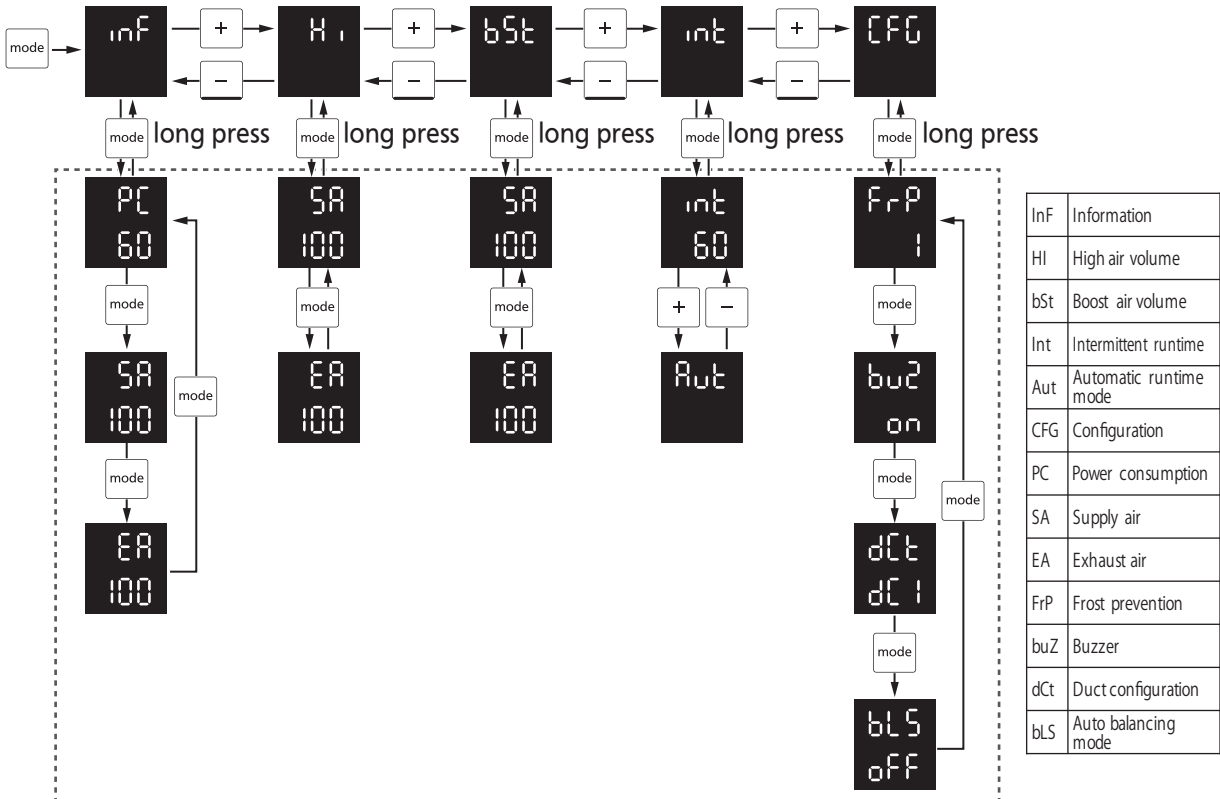

OPERATION

<Setting configuration>

Note

In each setting, press and hold the mode button to change.



Information

Indicate the status of ERV

PC : Current power consumption (W)

SA : Current supply air volume (CFM)

EA : Current exhaust air volume (CFM)



High air volume

Set the air volume of ventilation

SA : Set the supply air volume (CFM) by +/- button

EA : Set the exhaust air volume (CFM) by +/- button

Note

To use Lo air volume setting, wall control FV-SCVE2 must be connected (sold separately)



Boost air volume

Set the air volume when boost switch (optional) is on.

SA : Set the supply air volume (CFM) by +/- button

EA : Set the exhaust air volume (CFM) by +/- button

Note

When Boost is set lower than Hi, Hi will decrease accordingly.



Intermittent runtime

Set the ASHRAE timer

Set the runtime (min/h) by +/- button

Aut: The runtime will be automatically set as follows according to outdoor temperature.

Outdoor temperature	Runtime(min/h)
Less than -25°C (-13°F)	15
-25°C to -7°C (-13°F to 19°F)	20
-7°C to 10°C (19°F to 50°F)	40
10°C to 25°C (50°F to 77°F)	60
25°C to 28°C (77°F to 82°F)	30
28°C to 33°C (82°F to 91°F)	20
Above 33°C (91°F)	15



Configuration

Set other options

FrP : Set frost prevention mode by +/- button (FV-15ESC1 and FV-12ESC1 only)

1: Recirculation (factory setting)

2: Exhaust

buZ : Set the filter buzzer by +/- button

on (factory setting)

off

dCt : Set the duct configuration by +/- button

dC1 to dC5 (refer to DUCT INSTALLATION)

bLS : Set the auto balancing mode by +/- button

on

off (factory setting)

Note

When the auto balancing mode is on, if the air volume of either the supply or exhaust is reduced, the other will be adjusted automatically.

<Initial startup>



OA damper is installed on the left (default configuration)



OA damper is installed on the right (mirror configuration)

See P.12-13 for mirror configuration.


The unit operates supply-only in the initial startup. Check if your installation is correct, and press and hold the mode button to enter normal operation.

MAINTENANCE

⚠ CAUTION


- ⚠ Electric shock may result. Disconnect power by switching off main switch, then unplug before working on the unit. If a standby switch is connected, it is recommended to switch it off first.
- ⚠ Routine maintenance must be performed every 2 or 3 months. Clogged filters may cause condensation on the unit due to air flow reduction.
- ⚠ Wear gloves to avoid pinching fingers during maintenance.
- ⚠ Pay attention to dust, condensation water, or parts that may drop down when the door is opened.
- ⊘ Never use gasoline, benzene, thinner or any other such chemicals to clean the ERV.
- ⊘ Do not allow water to enter ERV.
- ⊘ Do not immerse resin parts in water over 60 °C.

1 Open the door by releasing the levers.

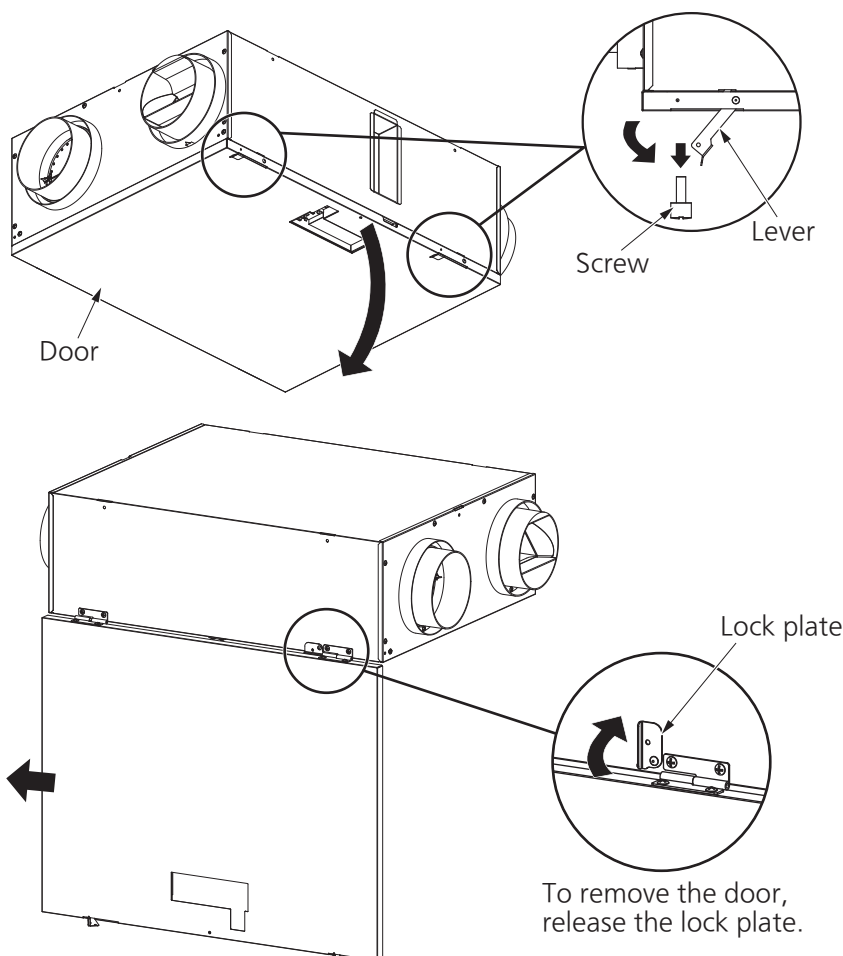


MAINTENANCE

- 2** Clean the filters.

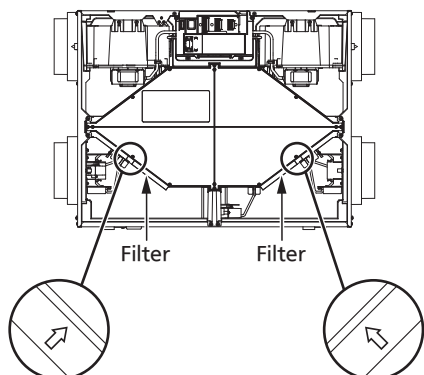



It is suggested to replace the filters every 6 months. Please fill in beginning time on new filters before replacing. Please replace filters with Panasonic FV-FL1315ES1 or FV-FL0615ES1

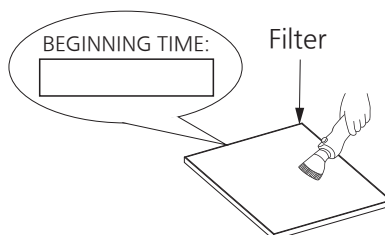

- 3** Reinstall the filters.

- 4** Reinstall and close door by putting back the levers.

- 5** Connect power and press filter reset button. When the unit beeps, the filter reset timer will be reset.

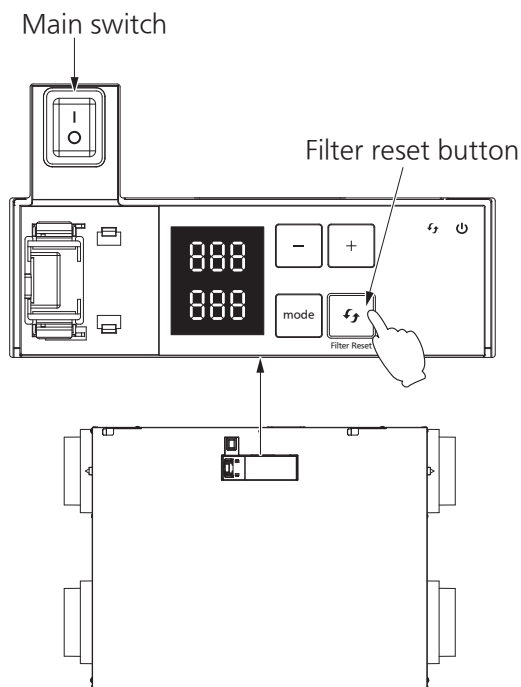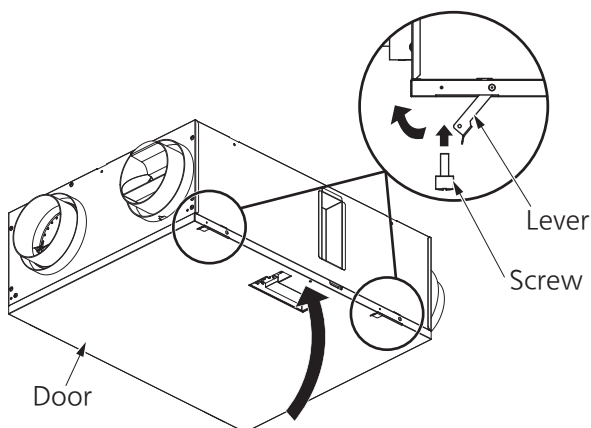

TROUBLESHOOTING

If a problem is encountered, please investigate it by going through the following items.
If the problem still persists, please disconnect the power and contact the dealer for repair.


Problem	Display	Running indicator (Green)	Filter indicator (Orange)	Action
1.The ERV doesn't work.	-	Off	Off	<ul style="list-style-type: none"> ■ Check the power is connected. ■ Check the door is closed. ■ Check that the main switch on the product is on. ■ Check if the spring on the inside of the door is damaged or deformed.
		On	Off	<ul style="list-style-type: none"> ■ ERV running interval according to the ASHRAE time setting. ■ When outdoor temperature is very low ERV stops operating automatically.(see P.4)
2.The HVAC/AHU doesn't work when ERV works.	-	On	Off	<ul style="list-style-type: none"> ■ Check the wiring connection. (P.6-7)
3.Alarm sounds (10 sec every hour) and ERV works.	-	On	On	<ul style="list-style-type: none"> ■ The filters need to be maintained. If you do not want the buzzer notification, see configuration setting (p.20-21).
4.Alarm sounds (30 sec every hour) and ERV doesn't work.	F03	Blink	Off	<ul style="list-style-type: none"> ■ PCB error, please disconnect the power and contact the dealer for repair.
	F10	Blink	Off	<ul style="list-style-type: none"> ■ OA temperature sensor error, please disconnect the power and contact the dealer for repair.
	F20	Blink	Off	<ul style="list-style-type: none"> ■ SA motor error, please disconnect the power and contact the dealer for repair.
	F21	Blink	Off	<ul style="list-style-type: none"> ■ EA motor error, please disconnect the power and contact the dealer for repair.
	H31	Blink	Off	<ul style="list-style-type: none"> ■ OA damper connection failure. Check the damper connection. (P.12-13)
	H32	Blink	Off	
	H33	Blink	Off	
	F60	Blink	Off	<ul style="list-style-type: none"> ■ Supply air flow is significantly decreasing. Check the ducting and the filter.
	F61	Blink	Off	<ul style="list-style-type: none"> ■ Exhaust air flow is significantly decreasing. Check the ducting and the filter.
5.Alarm sounds (30 sec every hour) and ERV works.	F01	Blink	Off	<ul style="list-style-type: none"> ■ Wall control communication error. Check the wall control wiring.(P.6-7)
	F04	Blink	Off	<ul style="list-style-type: none"> ■ PCB communication error. Contact the dealer for repair. *
	F11	Blink	Off	<ul style="list-style-type: none"> ■ OA humidity sensor error. Contact the dealer for repair. *
	F12	Blink	Off	<ul style="list-style-type: none"> ■ RA temperature sensor error. Contact the dealer for repair. *
	F13	Blink	Off	<ul style="list-style-type: none"> ■ RA humidity sensor error. Contact the dealer for repair. *

*Some functions will be limited when this error is encountered.

TROUBLESHOOTING

Problem	Display	Running indicator (Green)	Filter indicator (Orange)	Action
5. Alarm sounds (30 sec every hour) and ERV works.	F30	Blink	Off	■ Damper error, please disconnect the power and contact the dealer for repair.
	H60	Blink	Off	■ Supply air flow is decreasing. Check the ducting and the filter.
	H61	Blink	Off	■ Exhaust air flow is decreasing. Check the ducting and the filter.
6. ERV behaves differently from the selected air flow settings.	-	On	Off	■ When product runs in recirculation mode for frost prevention, the air volume will be more than setting and sound will be slightly louder than normal operation. ■ When outdoor temperature is less than 23 °F (-5 °C), the product will restrict air volume automatically to protect energy recovery core.

Wi-Fi Control Module

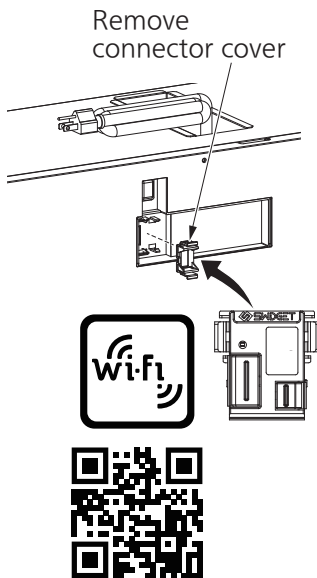

SCAN QR CODE FOR Wi-Fi
MODULE'S INSTRUCTION
OR VISIT WEB SITE

<http://WP100PBA-QR.swidget.com>
www.swidget.com

■ WP100PBA Swidget® Wi-Fi Control Module (sold separately)

Wi-Fi Plug'N Play™ features

- Wireless Plug 'N Play™ control module for Panasonic ventilation products.
- Connect and control Panasonic ventilation products with the Swidget iOS or Android app through 2.4 GHz Wi-Fi and/or Bluetooth mesh.

Swidget app features

- Control the air flow settings of all compatible Panasonic ventilation products with an always-ON or timer.
- View the supply air and exhaust air CFM, temperature and humidity of compatible Panasonic ventilation products.
- Receive notifications for faults, filter replacement and filter cleaning for compatible Panasonic ventilation products.
- Monitor the energy consumption of compatible Panasonic ventilation products.

⚠ CAUTION

- Turn off power at the circuit breaker or fuse and test that the power is off before installing or removing any module.
- Not for use to control medical or life support equipment.
- For INDOOR use only: 0°C - 40°C (32°F - 104°F).
- Module can only be installed in one orientation. Rear alignment pins prevent incorrect installation. Do not forcibly install a module.
- Requires a wireless router and Internet connection for device setup.
- Double check any external Wi-Fi settings for accuracy before using them.
- Actual wireless performance in a home depends on floor plan and router location.

SPECIFICATIONS

<Ventilation Performance>

Model No.	Voltage (V)	Frequency (Hz)	Duct	Static pressure	Net air flow (CFM)		Power consumption (W)	Weight lb.(kg)
					Exhaust	Supply	Fan unit	
FV-15ESC1	120	60	6"	0.2"WG	150	150	107	53 (24)
				0.4"WG	150	150	124	
FV-12ESC1	120	60	6"	0.2"WG	120	120	72	53 (24)
				0.4"WG	120	120	88	
FV-14ES1	120	60	6"	0.2"WG	140	140	93	51 (23)
				0.4"WG	140	140	110	
FV-11ES1	120	60	6"	0.2"WG	110	110	62	51 (23)
				0.4"WG	110	110	78	

<Energy Performance>

Model No.	Mode	Supply temperature		Net air flow		Power consumption (W)	Sensible recovery efficiency	Adjusted sensible recovery efficiency	Net moisture transfer
		°F	°C	L/s	CFM				
FV-15ESC1	Heating	32	0	17	36	21	90	94	0.94
		32	0	31	66	32	84	87	0.85
		32	0	52	110	61	77	81	0.77
		32	0	71	150	107	72	77	0.72
		-13	-25	31	66	80	68	71	0.74
	Cooling						Total recovery efficiency		
		95	35	17	36	21	84		
		95	35	31	66	33	77		
		95	35	52	110	64	66		
		95	35	71	150	115	60		

Model No.	Mode	Supply temperature		Net air flow		Power consumption (W)	Sensible recovery efficiency	Adjusted sensible recovery efficiency	Net moisture transfer
		°F	°C	L/s	CFM				
FV-12ESC1	Heating	32	0	17	36	21	89	93	0.92
		32	0	31	66	33	83	86	0.83
		32	0	52	110	62	75	79	0.75
		-13	-25	31	66	83	67	70	0.73
	Cooling						Total recovery efficiency		
		95	35	17	36	22	83		
		95	35	31	66	34	76		
		95	35	52	110	64	64		

Model No.	Mode	Supply temperature		Net air flow		Power consumption (W)	Sensible recovery efficiency	Adjusted sensible recovery efficiency	Net moisture transfer
		°F	°C	L/s	CFM				
FV-14ES1	Heating	32	0	17	36	21	89	93	0.89
		32	0	30	64	32	84	87	0.80
		32	0	52	110	61	76	80	0.73
	Cooling						Total recovery efficiency		
		95	35	17	36	21	83		
		95	35	30	64	33	77		
		95	35	52	110	64	65		

Model No.	Mode	Supply temperature		Net air flow		Power consumption (W)	Sensible recovery efficiency	Adjusted sensible recovery efficiency	Net moisture transfer
		°F	°C	L/s	CFM				
FV-11ES1	Heating	32	0	17	36	21	88	92	0.87
		32	0	30	64	33	83	86	0.78
		32	0	52	110	62	75	79	0.71
	Cooling						Total recovery efficiency		
		95	35	17	36	22	82		
		95	35	30	64	34	76		
		95	35	52	110	64	64		

The testing of the ventilation performance and the energy performance is in accordance with CSA-C439-18 standard.

Panasonic Ventilating Fan Limited Warranty

Panasonic Corporation of North America ("the Warrantor") will, at its sole discretion, replace this product with new parts or exchange this product, free of charge, in the USA, in the event of defects in material or workmanship in accordance to the following:

ALL Parts: For period of 3 years (36 months)
DC Motor: For period of 6 years (72 months)
LED Light Unit: For period of 5 years (60 months)


Service, in the USA, can be obtained during the warranty period by contacting the selling Distributor or Panasonic Customer Call Center at 1-866-292-7299, toll free.

This warranty does not cover labor charges for removal and installation of parts. This warranty is extended only to the original purchaser of a new product, which was not sold "as is", who purchased the product either directly from the Warrantor or from the Warrantor's authorized resellers (including authorized retail and Internet-based sellers), unless otherwise prohibited by law.


This warranty only applies to products purchased in the United States.

To claim warranty proof of purchase date will be required, in addition to fan model and serial number as shown in the photos below.

Example of display

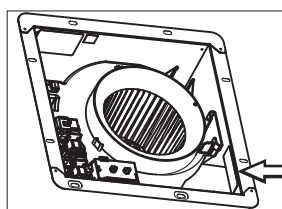

Ceiling Insert Type Vent-Fan

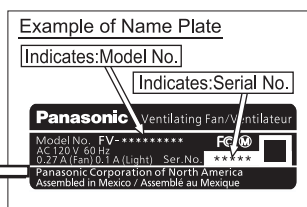

Name Plate

This warranty only covers failures due to defects in materials or workmanship that occur during normal use and does not cover shipping damages, whether visible or concealed, normal wear or cosmetic damage. The warranty does not cover failures that are caused by products and peripherals not supplied by the Warrantor, or failures which result from accident, misuse, abuse, negligence, mishandling, misapplication, alteration, modification, faulty installation, improper setups or adjustments, improper or lack of maintenance, alterations or modifications, power line surge, improper line voltage, lightning damage, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above. THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL CONSEQUENTIAL, OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, LOSS OF GOODWILL, PROFITS OR REVENUE, LOSS OF USE OF THIS PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF SUBSTITUTE PRODUCT, DOWNTIME COST, OR CLAIMS OF ANY PARTY DEALING WITH BUYER FOR SUCH DAMAGES, RESULTING FROM THE USE OF THIS PRODUCT OR ARISING FROM BREACH OF WARRANTY OR CONTRACT, NEGLIGENCE OR ANY OTHER LEGAL THEORY, EXCEPT AS EXPRESSLY PROVIDED ABOVE. THERE IS NO WARRANTY OR ANY OTHER KIND, EXPRESS OR IMPLIED, THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitation may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your Distributor or Panasonic Customer Call Center. If the problem is not handled to your satisfaction, then write to Panasonic Corporation of North America at the address indicated above.

Customer Services Directory

Obtain Product Information and Operating Assistance; locate your nearest distributor, or make Customer Service and Literature requests by visiting our Web Site at:
us.panasonic.com/ventfans

or send your request by E-mail to:
ventfans@us.panasonic.com

You may also contact us directly at:
1-866-292-7299 Monday-Friday 9 am - 6 pm, EST.

For hearing or speech impaired TTY users, TTY: 1-877-833-8855

Accessory Purchases

Purchase Parts and Accessories for Panasonic Ventilation Products by visiting our Website:

Consumers:

www.buypanasonicparts.com

or send your request by Email to: npcparts@us.panasonic.com
You may also contact us directly at 1-800-332-5368
(Monday-Friday 8am to 6pm, EST.)

Distributors:

Send your request by Email to: npcparts@us.panasonic.com
You may also contact us directly at 1-866-292-7299
(Monday-Friday 9 am - 6 pm, EST.)

Panasonic Consumer Electronics Company
Customer Service Group
2 Riverfront Plaza, Newark, NJ 07102

For hearing or speech impaired TTY users, TTY: 1-877-833-8855

PRODUCT SERVICE

Warning Concerning Removal of Covers.

The unit should be serviced by qualified technicians only.

Your product is designed and manufactured to ensure a minimum of maintenance.

Should your unit require service or parts, call Panasonic Call Center at 1-866-292-7299 (USA) or 1-800-669-5165 (Canada).

For FV-15ESC1 and FV-12ESC1

To ensure quiet operation of the ENERGY STAR certified ERV, each product model must be installed using sound attenuation techniques appropriate for the installation.

The way your energy-recovery ventilator is installed can make a significant difference to the electrical energy you use. To minimize the electricity use of energy-recovery ventilator, a stand-alone fully ducted installation is recommended. If you choose a simplified installation that operates your furnace air handler for room-to-room ventilation, an electrically efficient furnace that has an electronically commutated (EC) variable speed blower motor will minimize your electrical energy consumption and operating cost.

Installation of a user-accessible control with your product model will improve comfort and may significantly reduce the product model's energy use.

This product earned the ENERGY STAR® by meeting strict energy efficiency guidelines set by NaturalResources Canada and the US EPA. This product meets ENERGY STAR requirements only when used in Canada.



Panasonic Corporation of North America

Two Riverfront Plaza, Newark, NJ 07102

www.panasonic.com

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

www.panasonic.com

© Panasonic Corporation 2025

Printed in Mexico
Issue date: 06/2025
P0625-0 15ESC1450